

2017 **ARMADA**

QUICK REFERENCE GUIDE





- | | | | |
|---|--|--|---|
| 1 Headlight and Turn Signal Switch | 7 Cruise Control | 13 Power Liftgate ON/OFF Switch | 19 Heated Steering Wheel Switch* |
| 2 Instrument Brightness Control* | 8 Power Liftgate Switch | 14 Center Console Display | 20 Snow Mode Switch* |
| 3 Vehicle Information Display | 9 Sonar System OFF Switch* | 15 Audio System | 21 AUTO - 4HI - 4LO Selection Knob* |
| 4 Low Tire Pressure Warning Light | 10 Warning Systems Switch* | 16 Heater and Air Conditioner (automatic) | 22 Tow Mode Switch* |
| 5 Wiper and Washer Switch | 11 Blind Spot Warning/Blind Spot Intervention® Switch | 17 Front Passenger Air Bag Status Light* | 23 Vehicle Dynamic Control (VDC) OFF Switch* |
| 6 Steering Wheel Switches for Audio*/Bluetooth*/Navigation | 12 Headlight Aiming Switch* | 18 Climate-Controlled Seat Switch* | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Around View® Monitor (AVM) (if so equipped)	2
Blind Spot Warning (BSW) (if so equipped)	4
Forward Emergency Braking (FEB) (if so equipped)	4
Predictive Forward Collision Warning (PFCW) (if so equipped)	4
Lane Departure Warning (LDW) and Lane Departure Prevention (LDP) (if so equipped)	5
Backup Collision Intervention (BCI) (if so equipped)	5
NavTraffic and NavWeather (if so equipped)	6

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	7
Fuel-filler Door	7
Loose Fuel Cap	8
Clock Set/Adjustment	8

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	9
Power Liftgate Release (if so equipped)	10
Power Front Seat Adjustments	11
2 ND Row Seat Adjustments (if so equipped)	11
3 RD Row Power Folding Seats (if so equipped)	12
Starting/Stopping the Engine	12
Automatic Drive Positioner (if so equipped)	13
Power Moonroof (if so equipped)	13
Headlight Control Switch	14
Outside Mirror Control Switch	15
Wiper and Washer Switch	15
Heater and Air Conditioner (automatic)	16
Rear Heater and Air Conditioner	18
AM/FM/SiriusXM® Satellite Radio with CD/DVD Player	19
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface	20
Cruise Control (if so equipped)	20
Intelligent Cruise Control (ICC) (if so equipped)	21
Power Outlets	22

SYSTEM GUIDE

Vehicle Information Display	23
Bluetooth® Streaming Audio	23
Bluetooth® Hands-free Phone System	24
System Operating Tips	24
Navigation System	28
DVD Entertainment System (if so equipped)	29
HomeLink® Universal Transceiver (if so equipped)	31



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.


- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES


AROUND VIEW® MONITOR (AVM) (if so equipped)

- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.

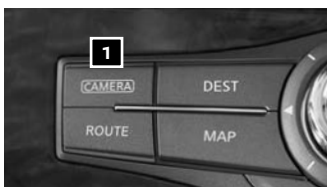


- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Start from any Control Panel screen

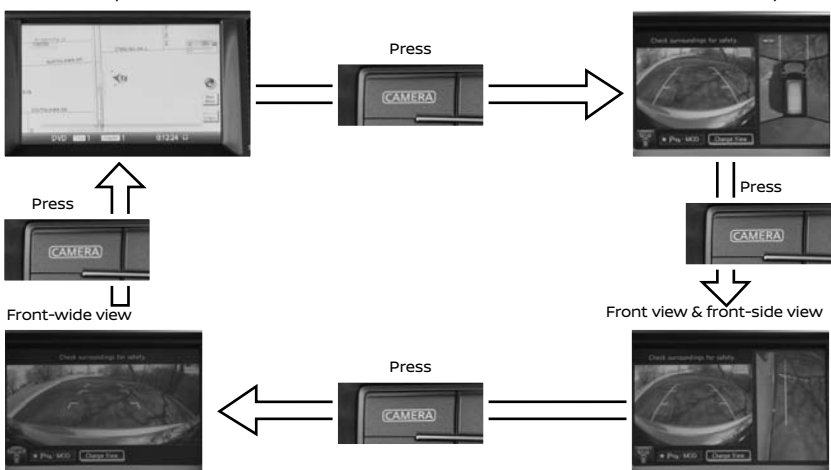

- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

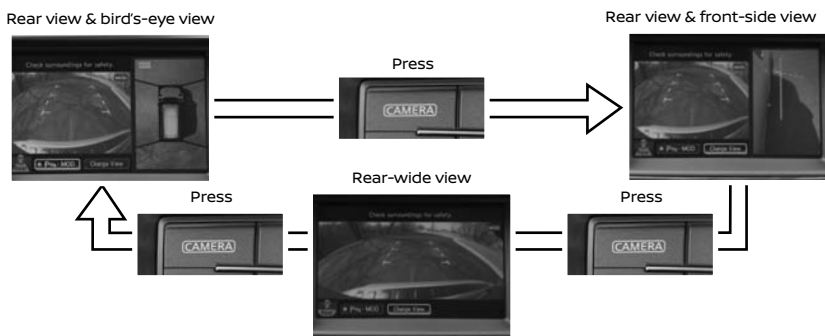


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

■ For information regarding how to access additional viewing cycles, please see your Owner's Manual.


■ There are some areas where the system will not detect objects.

 • When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.



• When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.

• The distance between objects viewed on the Around View Monitor differs from the actual distance.

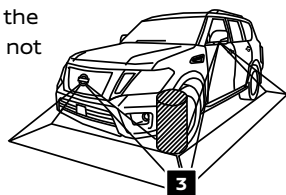

■ Objects in the bird's-eye view will appear further than the actual distance.

MOVING OBJECT DETECTION (MOD) (if so equipped)

■ The MOD system helps inform the driver of moving objects around the vehicle.

■ The system will operate when the shift lever is in the **D (DRIVE)**, **N (NEUTRAL)**, **R (REVERSE)** or **P (PARK)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.

■ If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.

■ When the following is displayed:

- Blue **MOD** icon **4**; the system is active.
- Gray **MOD** icon; the system is not active.
- No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.



■ The MOD system will not operate if the liftgate is open.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

NEW SYSTEM FEATURES

BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.



For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FORWARD EMERGENCY BRAKING (FEB) (if so equipped)


- The FEB can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light **1** will illuminate. If the driver applies the brakes after the warning and the FEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB will issue a second flashing visual warning **2**, an audible warning and also apply partial braking.



For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

PREDICTIVE FORWARD COLLISION WARNING (PFCW) (if so equipped)

- The PFCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The PFCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the PFCW system will warn the driver with the vehicle ahead detection indicator light **1** and an audible warning tone will be heard.

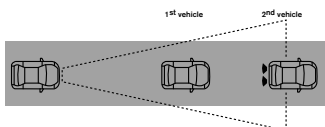

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

LANE DEPARTURE WARNING (LDW) AND LANE DEPARTURE PREVENTION (LDP) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 45 mph (70 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW light **1** on the instrument panel will blink to alert the driver.
- The LDP system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the center display. To temporarily turn off the system, push the warning systems switch **2** on the instrument panel.
- When the system is off, the indicator light **3** on the switch is off.



For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

BACKUP COLLISION INTERVENTION (BCI) (if so equipped)

- The BCI system can help alert the driver of an approaching vehicle or objects behind the vehicle when backing out of parking spaces.
- The rear radar sensors detect the approaching vehicle from up to approximately 49 ft (15 m) from the bumper.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

NAVTRAFFIC* AND NAVWEATHER* (if so equipped)

- Your vehicle's Navigation System is equipped with NavTraffic and NavWeather capabilities.
- NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction, and may provide a detour to help avoid congestion.
- NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around your current vehicle location.




*These features, SiriusXM® Satellite Radio, NavTraffic and NavWeather, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and the low tire pressure warning light **2** will extinguish.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

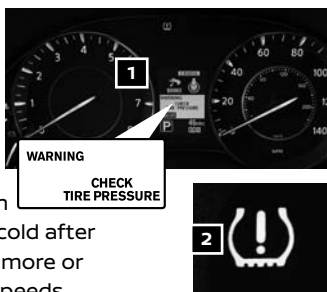

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

FUEL-FILLER DOOR


 
- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, press on the fuel-filler door then pull the lid open. The doors must be unlocked.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

ESSENTIAL INFORMATION


LOOSE FUEL CAP


- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** is pressed for longer than one second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the “Others” key
 3. Then, touch the “Clock” key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the  **BACK** button to return to the previous screen.

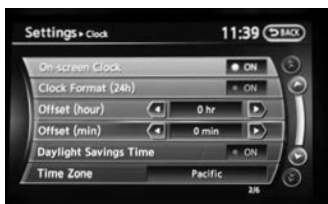



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM





The Nissan Intelligent Key® System allows you to lock or unlock the vehicle, open the liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START* (if so equipped)

- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all the doors closed and locked.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the remote engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.



LOCKING AND UNLOCKING THE VEHICLE


- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 30 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.
- To open the liftgate, press the  button **5** for more than 1 second.



*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch START/STOP button while depressing the brake pedal and the engine will start.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

POWER LIFTGATE RELEASE (if so equipped)

When the liftgate is closed, the liftgate will fully open automatically by:

- Pushing the power liftgate switch **1** on the instrument panel.
- Pulling the liftgate opener switch **2** once the vehicle is unlocked.
- Pressing the power liftgate button **3** on the key fob for more than 1 second.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



POWER FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.



SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the front or back end of the switch **3**.

For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

2ND ROW SEAT ADJUSTMENTS (if so equipped)

- To recline the seatback, pull up on the recline handle **1** or the seatback latch **2** located on the upper corner of the seatback and lean back. To bring the seatback forward, pull the handle up and lean your body forward. Release the handle to lock the seatback in position.



TIP UP FOR EASY ENTRY/ EXIT OF THE 3RD ROW

1. Raise the armrest (captain’s chairs) so it is parallel to the seatback and in the stowed position.
2. Then lift the recline handle **1** or the seatback latch **2** and fold the seatback forward onto the seat base.
3. Finally, lift the lower corner of the seat base and fold the seat forward.



For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

3RD ROW POWER FOLDING SEATS (if so equipped)

- Before operating the 3RD row seats:
 - Make sure the 2ND row seatback is not reclined.
 - Lower the 3RD row headrest to the full down position.
 - Disconnect and secure the center seat belt and tongue into the retractor base. Always reconnect the center seat belt when the seat is returned to the upright position.
 - Make sure that there are no objects on the seatback cushion.
- The 3RD row power folding seat controls are located on the rear quarter trim panel behind the 3RD row seats (on the passenger's side) **1**.
- To fold down the 3RD row seats, push and hold the left portion of the switch.
- To raise the 3RD row seats, push and hold the right portion of the switch.
- If the ignition switch is in the OFF position, the power folding seats are always operational.
- If the ignition switch is in the ON position, the power folding seats are only operational when the shift lever is in the **P (PARK)** or **N (NEUTRAL)** position.



For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch **START/STOP** button.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, accelerator and brake pedals and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the ON position.
 - Adjust the driver's seat, accelerator and brake pedals and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, accelerator and brake pedals and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.
- To link a memorized position to your Nissan Intelligent Key®, press the unlock button on the key fob after completing the previous step.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

POWER MOONROOF (if so equipped)

OPENING/CLOSING THE MOONROOF

- To fully open or close the moonroof, push the open **1** or close **2** side of the switch and release it. The roof will automatically open or close; it need not be held.

TILTING THE MOONROOF

- To tilt up, first close the moonroof, then push the close **2** side of the switch and release it; it need not be held. To tilt down the moonroof, push the open **1** side of the switch.

 
 


For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

FIRST DRIVE FEATURES



HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

 

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.




AUTOLIGHT SYSTEM



- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

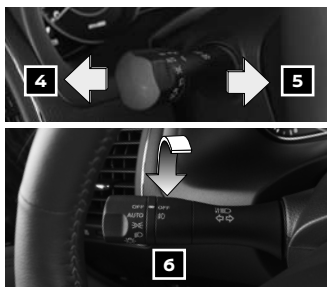

FOG LIGHT SWITCH (if so equipped)

  - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, slide the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch **1** to the center (neutral) position.




POWER FOLDING OUTSIDE MIRRORS



- To open the mirrors, push the switch **3**.
- To close the mirrors, push the switch **4**.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.


WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper sensitivity.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Front washer  – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

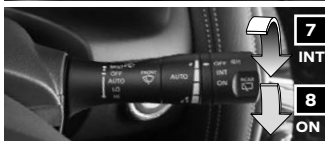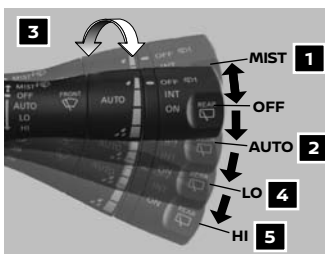

REAR WIPER AND WASHER

 - 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Rear washer  – Push the lever forward to activate the rear washer. The rear wiper will operate several times.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic)



1 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- Press the **AUTO** button, and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Turn the driver's side temperature control dial to set your desired temperature.
- Automatic mode may be used year-round and will work to reach a comfortable temperature quickly. For example on a very hot day, the system will initially operate at maximum air flow for rapid cool down.





2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control by turning the passenger's side control.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.



3 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually decrease the fan speed  or increase the fan speed .

4 MODE BUTTON


- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the front defroster and foot vents.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

 



- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **1** to set the desired temperature.
- To set the front defroster on high, press the fan speed control button  to increase the fan speed to the maximum setting.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH

- Push the rear window and outside mirror defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

7 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation button  **7** to draw outside air into the passenger compartment.
- Push the air recirculation button  **8** to recirculate interior air inside the vehicle.
- The air recirculation mode cannot be activated when the air conditioner is in the front defroster mode.
- This mode helps to adjust the inside vehicle temperature more effectively.
- To automatically control air intake inside the vehicle, press and hold either the outside air circulation button  **7** or the air recirculation button  **8** (whichever indicator light is illuminated). Both of the indicator lights will flash twice, and then the air intake will switch to automatic control.

9 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper vent flows to control the cabin temperature without blowing air directly on the occupants.

10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.
- When on, this system not only provides cooler air but also removes humidity from the air to help avoid window fogging.

11 REAR BUTTON

- This button will allow the front controls to operate the front or rear climate control systems.
- To operate the rear climate control system from the front, press the **REAR** button so that the light illuminates and the "Rear Air-conditioning" screen is displayed.



- To adjust the front climate control system, press the **REAR** button again.

For more information, refer to the "Instrument and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FIRST DRIVE FEATURES

REAR HEATER AND AIR CONDITIONER

- To activate the system:

1. Press the **REAR** button **1** on the front control panel until the "Rear Air-conditioning" screen is displayed.



- The indicator light will illuminate.
- The fan speed, temperature, **AUTO** and **OFF** buttons will now control the rear climate control system.

2. Press the **REAR** button **1** again, and the screen will return to what was previously displayed.

- The indicator light will stay illuminated to indicate that the rear climate control system is active.

- **OFF** button **2** – Turns off the rear climate control system and **REAR** button indicator light.



- Fan speed control buttons **3** – Press **+** or **-** to increase or decrease fan speed.

- Temperature increase and decrease buttons **4** – Adjusts the rear temperature up **▲** or down **▼**.

- **AUTO** button **5** – The system automatically works to keep air flow and fan speed at a constant temperature.

- **MODE** button **6** – Changes the air flow mode. The air flow modes are:

- The air outlet is fixed at foot level.
- The air outlet is fixed at the head and foot level.
- The air outlet is fixed at the head level.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



AM/FM/SiriusXM®* SATELLITE RADIO WITH CD/DVD PLAYER

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE/FOLDER KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

3 SEEK-CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **SEEK-CAT** button or the **TRACK** button.
- For satellite radio, press the **SEEK-CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **SEEK-CAT** button or the **TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the **SEEK-CAT** button or the **TRACK** button.

4 STATION PRESET BUTTONS

- Six stations can be set for the AM band, 12 for the FM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **XM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND IPOD® INTERFACE

- The USB port/Aux jack **1** is located behind the shift lever in front of the armrest.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)


- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the meter panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release it. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light will extinguish.

 
 
 


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Press the distance  button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off Intelligent Cruise Control, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** in the instrument panel will extinguish.



For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER OUTLETS



- The power outlets are used for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Power outlets are located on the instrument panel **1**, in the cup holder bin **2**, on the rear of the center console **3** and in the cargo area **4**.
- To use a power outlet, open the cap or pull out the plug cover.
- The power outlets are powered only when the ignition switch is in the ACC or ON position.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

- The vehicle information display **1** is located to the left of the speedometer.
- Press the  button **2** located to the right of the instrument panel to toggle through the following modes:
 - **Average MPG** – Displays the instant fuel economy since the last reset.
 - **Real Time MPG / MPH** – Displays estimated average fuel economy and average vehicle speed.
 - **Drive TIME / Distance Traveled** – Displays the current drive time and distance traveled since the last reset.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the current outside temperature.
 - **SETTING** – Displays all available display and system settings.
 - **WARNING** – Displays when a warning is present.
- To enter the highlighted menu, press the  button **3**.
- To reset **TRIP A** or **TRIP B**, go to the desired mode by pressing the **TRIP RESET** button **4** and press and hold the **TRIP RESET** button **4** for more than 1 second.



For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.



*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

2. Select "Connected Devices".
3. Select "Audio Player".
4. Select the name of the device that you are attempting to connect as an audio player.
5. Select "Select".
6. Verify that the system confirms that the device has been selected as an audio player.

- Once your Bluetooth® device has been connected as an audio device, press the **DISC-AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

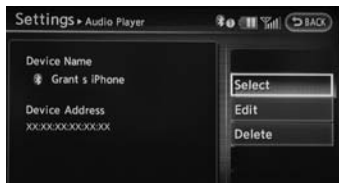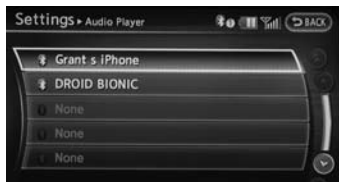



*Some jurisdictions prohibit the use of cellular telephones while driving.


For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.


BLUETOOTH® HANDS-FREE PHONE SYSTEM¹

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.²

  SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
 - This system has an Alternate Command Mode setting that allows the total number and length of prompts to be reduced. When the Alternate Command Mode is activated, you may speak second level commands with the main menu command. For example, press the  button on the steering wheel, and after the tone, say "Call" followed by a stored name. Refer to the "Voice Recognition (section 9)" of your Navigation System Owner's Manual.

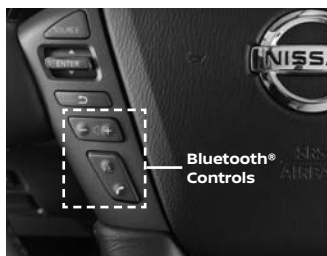


- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a Voice Recognition session, say “Cancel” or “Quit” or press and hold the  button on the steering wheel.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.

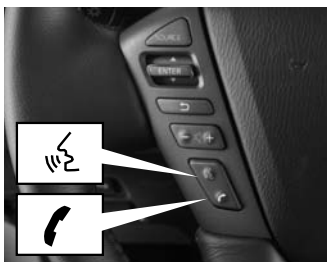

1. Press the **SETTING** button on the control panel and select the “Bluetooth” key on the display.



SYSTEM GUIDE

2. Select the "Connect Bluetooth" key.



3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the hands-free phone system. Select the "Yes" key.
4. Initiate connecting from the cellular phone.



- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
- When prompted for a PIN, enter "1234" from the handset.




- For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.

5. When connecting is complete, the screen will return to the "Bluetooth Settings" screen.

PHONEBOOK SETUP


- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth^{®1} system.
- If the phonebook does not download automatically, the vehicle's phonebook may be set for up to 40 entries.
- To manually download entries:

1. Press the  button on the steering wheel and select the "Quick Dial" key.




2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:


- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad" to input the number and name manually.

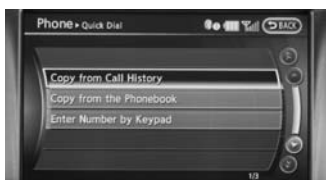



MAKING A CALL


To make a call, follow this procedure:

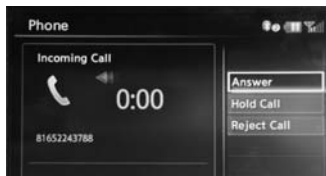1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject a call, touch the "Reject Call" key on the display.
- To hang up, press the  button on the steering wheel or touch the "Hang up" key.

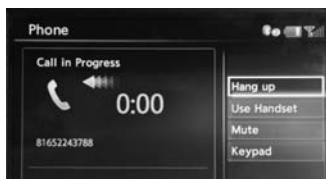

¹ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.

Compatible smartphone required. Text rates and/or data usage may apply.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE



NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1** Touch-screen display
- 2** Destination (**DEST**) – Press to enter a destination.
- 3** **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 4** **☀/🌙 OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 5** **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- 6** Multi-Function Controller
 - a. **ENTER** button– Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
 - b. Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
 - c. Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
 - d. Center dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.
- 7** Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 8** **STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 9** **SETTING** – Press to access the system settings.
- 10** **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 11** **VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, refer to your Navigation System Owner's Manual.

DVD ENTERTAINMENT SYSTEM (if so equipped)

- With this entertainment system, you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.



WATCHING A DVD

1. Insert a DVD into the DVD slot **1**.
2. The DVD will play automatically.
 - To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.


REAR DISPLAYS

- To turn the rear displays on or off from the front seats:
 1. Press the **SETTING** button **2** on the control panel.
 2. Select the "Rear Display" key on the display.
 3. Toggle the "L" (Left) or "R" (Right) display **3** on or off.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC-AUX** button **4** on the control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To turn the rear displays on or off from the rear seats:
 1. Select the desired seat by sliding the **DISPLAY SELECT** switch **5** on the remote control to the **L (Left)** or **R (Right)** position.
 2. Press the **POWER**  button **6** on the remote control.
- To control the DVD from the rear seats, use the remote control.

OPERATING TIPS

- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- For the best audio sound quality, please make sure you are facing the monitor directly in front of you.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.





HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2017/armada or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2017 Nissan North America, Inc.

QR17EA 0Y62U2

Printing: March 2017 (03)

