


2011 XTERRA

QUICK REFERENCE GUIDE



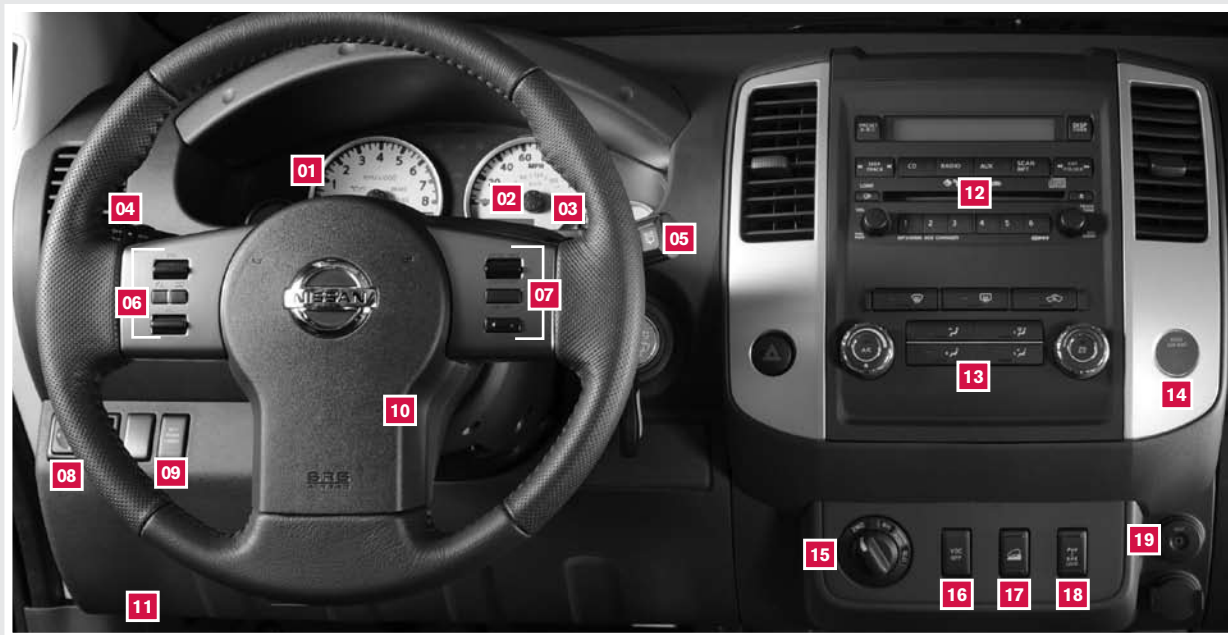

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** TRIP COMPUTER\*
- 03** INSTRUMENT BRIGHTNESS CONTROL / TRIP CHANGE BUTTON\*
- 04** HEADLIGHT AND TURN SIGNAL CONTROL
- 05** WINDSHIELD WIPER / WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH\*
- 07** CRUISE CONTROL
- 08** OUTSIDE MIRROR CONTROL SWITCH
- 09** OFF-ROAD LAMPS SWITCH\*
- 10** STEERING WHEEL TILT ADJUSTMENT\*

- 11** HOOD RELEASE\*
- 12** AUDIO SYSTEM
- 13** MANUAL CLIMATE CONTROLS
- 14** FRONT PASSENGER AIR BAG STATUS LIGHT\*
- 15** 4-WHEEL DRIVE (4WD) SHIFT SWITCH\*

- 16** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH\*
- 17** HILL DESCENT CONTROL SWITCH\*
- 18** E-LOCK SWITCH\*
- 19** AUXILIARY JACK\*

\*See your Owner's Manual for more information.

**ESSENTIAL INFORMATION**

Loose Fuel Cap ..... 2  
 Tire Pressure Monitoring System (TPMS)..... 2

**FIRST DRIVE FEATURES**

Remote Keyless Entry System ..... 3  
 Seat Adjustments ..... 3  
 Outside Mirror Control Switch ..... 3  
 Starting/Stopping the Engine..... 4  
 Headlight Control Switch ..... 4  
 Windshield Wiper Switch ..... 5  
 Climate Controls ..... 5  
 FM/AM/XM® Radio with CD Changer (if so equipped)..... 6  
 Parking Brake..... 6  
 Liftgate Release..... 7  
 Fuel-Filler Door..... 7

**SYSTEM GUIDE**

Cruise Control ..... 8  
 Bluetooth® Hands-free Phone System (if so equipped)..... 8



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at [www.nissanusa.com](http://www.nissanusa.com).




This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

# essential information

## LOOSE FUEL CAP


- A LOOSE FUEL CAP warning message will display in the odometer **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

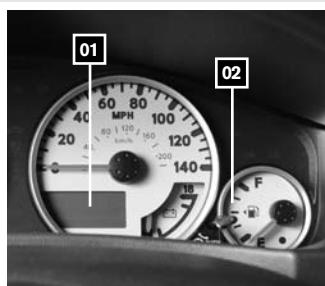

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

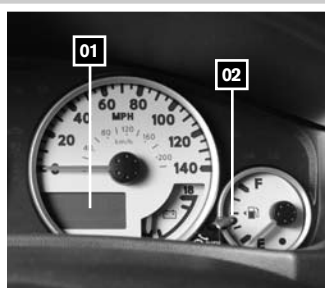

- A CHECK TIRE PRES warning message will display in the odometer **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, press the reset button **02**. Drive the vehicle at speeds above 16MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

## REMOTE KEYLESS ENTRY SYSTEM



The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your keyfob.
- To unlock the vehicle, press the  button on your keyfob.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.




## SEAT ADJUSTMENTS

- Pull up on the lever  under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Pull up on the lever  and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.





### SEAT LIFTER (for driver’s seat)

- Turn either dial  to adjust the angle and height of the seat cushion to the desired position.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



## OUTSIDE MIRROR CONTROL SWITCH

- Move the switch  right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch .

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



# first drive features

## STARTING/STOPPING THE ENGINE

AUTOMATIC TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to P (PARK).
- Turn the ignition switch to **START**.

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to N (Neutral).
- Depress the clutch pedal to the floor.
- Turn the ignition switch to **START**.



TURNING THE ENGINE OFF

- For an automatic transmission, move the shift lever to the P (PARK) position, apply the parking brake and turn the ignition switch to the **LOCK** position.
- For a manual transmission, apply the foot brake, place the vehicle in first gear, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## WINDSHIELD WIPER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Intermittent (**INT**) – Front wipers operate intermittently.
- 02** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 03** High (**HI**) – Front wipers operate at a continuous high-speed.
- 04** Rear Wiper (**REAR**) – Twist the end of the lever to operate the first (**INT**) or second (**ON**) speed settings for the rear wiper.




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



## CLIMATE CONTROLS


### **01 FAN SPEED CONTROL DIAL**

- Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.

### **02 TEMPERATURE CONTROL DIAL**

- Turn the temperature control dial **02** to select the desired temperature. Turn the control dial to the left for cooler air or right for warmer air.

### **03 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS**

- Press the front window defroster button  to turn the system on or off.

### **04 REAR WINDOW DEFROSTER SWITCH**

- Press the rear window defroster switch  to turn the system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

# first drive features



## FM/AM/XM<sup>®</sup>\*\* RADIO WITH CD CHANGER (if so equipped)

### 01 VOL/PWR CONTROL KNOB

- Press the **VOL/PWR** control knob to turn the system on or off.
- Turn the **VOL/PWR** control knob to the right or left to increase or decrease the volume.

### 02 TRACK/TUNE/AUDIO KNOB

- To manually tune the radio, turn the **TRACK/TUNE/AUDIO** knob left or right.


\*XM<sup>®</sup> Satellite Radio is only available on vehicles equipped with optional XM<sup>®</sup> satellite subscription service.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

## PARKING BRAKE

- To apply, pull the parking brake lever **01** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Press the button **02** and lower the lever completely.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

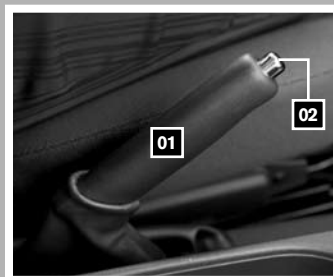




## LIFTGATE RELEASE

- Unlock the liftgate by pressing the  button on the keyfob twice.



- To open the liftgate, pull up on the handle .

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## FUEL-FILLER DOOR

- The fuel-filler door is located on the left, rear side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



## BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Heater, air conditioner, audio and phone systems (section 4)”** of your Owner’s Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).







Nissan, the Nissan Brand Symbol, "SHIFT\_" tagline,  
Z and Nissan model names are Nissan trademarks.  
© 2010 Nissan North America, Inc.  
QR1E 0N50U0  
Printing: July 2010 (13)

